



ALTEC LANSING®



FX4021

*User's guide
Mode d'emploi*

*Guia do Usuário
Guía del usuario*



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CONNECTING THE POWER CORD (AC WALL SOCKET)

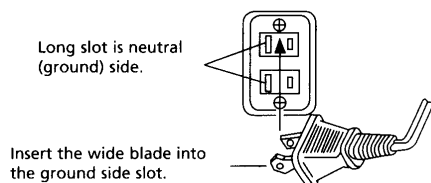

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water — This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The apparatus must not be placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings. Ventilation should not be impeded by covering the openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched — particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
13. Power source — Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply — use only manufacturer-provided power supplies.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. For service, refer to qualified service personnel, return to the dealer, or call the Altec Lansing service line for assistance.
16. For products which incorporate batteries, please refer to local regulations for proper battery disposal.
17. Only use attachments/accessories specified by the manufacturer.
18. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



ALTEC LANSING TECHNOLOGIES, INC. ONE YEAR LIMITED WARRANTY (TWO-YEAR LIMITED WARRANTY IN THE EUROPEAN UNION AND ASIA)

What Does The Warranty Cover?: Altec Lansing warrants that its products shall be free from defects in materials or workmanship, with the exceptions stated below.

What Is The Period Of Coverage?: For units purchased in European Union or Asia, this warranty runs for two years from the date of purchase. For units not purchased in Europe or Asia, this warranty runs for one year from the date of purchase. The term of any warranties implied by law shall expire when your limited warranty expires. Some states and/or Member States in the European Union do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Does The Warranty Not Cover?: This warranty does not cover any defect, malfunction or failure that occurs as a result of: improper installation; misuse or failure to follow the product directions; abuse; or use with improper, unintended or faulty equipment. (For information on proper installation, operation and use consult the manual supplied with the product. If you require a replacement manual, you may download a manual from www.alteclansing.com.) Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What Will Altec Lansing Do To Correct The Problem?: Altec Lansing will, at its option, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured, or is out of stock, at its option, Altec Lansing may replace your product with a similar or better Altec Lansing product.

How To Get Warranty Service: To get a covered product repaired or replaced, you must contact Altec Lansing during the warranty period by email (csupport@alteclansing.com). You must include in your email, your name, address, email address, telephone number, date of purchase and a complete description of the problem you are experiencing. In the United States, you may alternatively contact Altec Lansing by telephone at 1-800-ALTEC88 — please be prepared to provide the same information. If the problem appears to be related to a defect in material or workmanship, Altec Lansing will provide you a return authorization and instructions for return shipment. Return shipments shall be at the customer's expense, and the return must be accompanied by the original proof of purchase. You should insure the shipment as appropriate because you are responsible for the product until it arrives at Altec Lansing.

How Will State Law Affect Your Rights?: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Please note that in the European Union, you as a consumer might have other legal rights under national legislation of European Union Member States governing the sale of Altec Lansing's goods. Those rights are not affected by this guarantee.

The above limited warranties and remedies are sole warranties and remedies available to purchaser, if, and to the extent, valid and enforceable under the applicable law.

CUSTOMER SERVICE

The answers to most setup and performance questions can be found in the Troubleshooting guide. You can also consult the FAQs in the customer support section of our Web site at www.alteclansing.com. If you live in North America and still can't find the information you need, please call our customer service team for assistance before returning the speakers to your retailer under their return policy.

Tel: 800-258-3288

Email: csupport@alteclansing.com

If you live outside of North America, please visit our website at www.alteclansing.com and select your region to locate your country's distributor.

For the most up-to-date information, be sure to check our Web site at www.alteclansing.com.

INTERNATIONAL DISTRIBUTION

International customers: For information regarding the distribution of Altec Lansing products in your country, please visit www.alteclansing.com and click on your region.

DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office or your household waste disposal service.

FX4021 THREE-PIECE POWERED AUDIO SYSTEM

Thank you for purchasing this Altec Lansing product. For generations, Altec Lansing has been first in audio innovation. Today, our line of powered speakers has received more performance awards than any other brand. In all kinds of environments, in every price range, Altec Lansing offers sound of distinction — giving even the most demanding customers the audio enjoyment they seek. Just listen to this!

BOX CONTENTS

- Two speakers
- One subwoofer
- Control pod
- Wireless remote
- 3.5mm stereo cable
- User's guide and quick connect card

PLACING SPEAKERS

SUBWOOFER

All stereo-encoded information is heard through the satellite speakers. The subwoofer contains no stereo imaging, and its sound is non-directional. As a result, the subwoofer doesn't have to be placed in any particular relationship to the satellites. However, placing the subwoofer on the floor close to a wall or room corner provides better bass efficiency and optimum sound.

Warning: The subwoofer is not magnetically shielded. As such, it **SHOULD** be placed at least 2 feet (0.6m) from TVs, computer monitors, computer hard drives or any other magnetic media (e.g. floppy disks, Zip disks, computer or audio tapes, etc.).

SATELLITE SPEAKERS

Arrange the satellite speakers to suit your listening tastes — from right next to the monitor to as far apart as the speaker cords allow.

For optimum sound, satellite speakers should be placed in a left/right configuration, preferably apart and at equal distance from the center of the listening area. This will offer the best stereo imaging and provide the most satisfying results.

Note: The satellite speakers **ARE** magnetically shielded and can be placed close to video displays such as TVs and computer monitors without distorting the image.

MAKING CONNECTIONS

Warning: Do not insert the speaker system's power plug into a wall outlet until all connections are made. Also, turn off the audio source (e.g., your PC, MP3 player, TV, DVD player, video gaming console, etc.) before connecting the outputs to the speaker system's inputs.

To ensure first-time operation as expected, please carefully follow the connection sequences described below in the order indicated.

SPEAKER SYSTEM

- Connect the right satellite speaker RCA jack to the input labeled RIGHT on the back of the subwoofer.
- Connect the left satellite speaker RCA jack to the input labeled LEFT on the back of the subwoofer.
- Connect the control pod to the subwoofer by plugging the grey DIN connector to the input marked DIN on the back of the subwoofer.
- Connect one end of the audio input cable (with lime green connectors at each end) to the matching lime green input plug on the back of the subwoofer, labeled INPUT. Connect the other end of the audio input cable to your desired audio source.

INPUTS

Various connection schemes between your audio source and the speaker system are available. Determine if you'll be setting up the speaker system for PC audio/PC gaming, DVD playback, console gaming or with portable audio devices (such as MP3 or portable CD players), then skip to the appropriate section.

PC

All PC sound cards have audio outputs. Typically, the outputs will be marked as "front output" and "rear output." In some cases, slightly different terminology may be used. The sound card's documentation should help you determine which outputs to use with your speaker system.

- Locate the 3.5mm stereo cable.
- Connect the 3.5mm stereo cable to the lime green input labeled "FRONT" on your sound card.

TV/DVD PLAYER OR VIDEO GAMING CONSOLE

To connect your Altec Lansing speaker system to your TV, DVD player, or video gaming console follow the steps below:


- Make sure the power to your audio source is turned off.
- Locate the following elements:
 - A TV/DVD Player adapter (3.5mm to RCA), available on www.alteclansing.com or your local electronics store. This RCA adapter features a lime green 3.5mm stereo jack on one end and two RCA jacks on the other — one red and one white.
 - The included 3.5mm stereo cable. This cable features a lime green 3.5mm stereo jack on both ends.
 - A red and white RCA cable. This cable should feature a red and white RCA jack on both ends.
- Connect one end of the red and white RCA cable to your audio source, and the other end to the matching red and white RCA jacks on the TV/DVD Player adapter.
- Connect one end of the 3.5mm stereo cable to the lime green input on the TV/DVD Player adapter, and the other end to input labeled "INPUT" on the back of the subwoofer.

Note: If your video gaming console does not feature RCA outputs, consider connecting the speaker system to the TV instead.

PORTABLE AUDIO DEVICES (CD PLAYERS, IPODS AND OTHER MP3 PLAYERS, ETC.)

Connect the 3.5mm stereo cable to the headphone jack on your portable audio device.

POWERING ON

1. After all other connections are made, plug the AC power cord (on the back of subwoofer) into a wall outlet. The speaker system is now ready to operate.
2. Turn on the audio source.
3. Turn on the speaker system by pressing the stand-by button  on the control pod or wireless remote. An LED will light on the control pod when the power is ON.
4. Install the supplied battery in the remote's battery compartment.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Note: To avoid hearing a popping sound when you turn on your Altec Lansing speaker system, always turn on your audio source first.

MASTER VOLUME

The rotary dial on the control pod controls the master volume. Rotate the dial to the right to increase the volume, or to the left to decrease it.

The "+" and "-" buttons on the wireless remote also control the master volume. Press the "+" button to increase the volume, or the "-" button to decrease it.

LEDs on the control pod will indicate the volume level.

TREBLE AND BASS

To control treble or bass levels using the control pod, press the "TREBLE" or "BASS" buttons on the control pod and rotate the dial to the right to increase the corresponding level, or to the left to decrease it.

To control treble or bass levels using the wireless remote, press the "TREBLE" or "BASS" or buttons on the wireless remote and press the "+" button to increase the corresponding level, or the "-" button to decrease it.

LEDs on the control pod will indicate the corresponding level.

Note: After three seconds, the control pod and wireless remote will automatically reset to "Master Volume."

LOUDNESS


The loudness function contours the high and low frequencies to maximize the perceived audio. Press the "LOUDNESS" button on the control pod or "LOUD" button on the wireless remote to turn it on. Press either button again to turn it off.

SFX TECHNOLOGY™

Sound Field Xpander™ technology allows your speaker system to deliver a wider stereo image for bigger sound at the touch of a button. Press the "SFX" button on the control pod or wireless remote to turn it on. Press it again to turn it off.

Note: This feature does not work when using headphones.

STAND-BY/MUTE

To mute the speaker system, press the  button located on the control pod or wireless remote. The LED on the control pod will turn off. To un-mute, perform either command again.

Note: While in stand-by or mute mode, the system continues to receive power. To completely shut down the unit unplug the unit from the wall.

RESET

The button marked with the word "reset" on the wireless remote restores volume, bass, treble, loudness and SFX controls to original factory settings.

iPOD/MP3 PLAYER JACK

The iPod or MP3 player jack is located on the side of the control pod. Use it to connect any audio source that has a stereo 3.5mm plug (i.e. headphone style plug.)

Caution: Make sure the audio source features a line-out jack. This will ensure that the output is not amplified. Check the owner's manual for your audio device for more information.

HEADPHONES

The headphone jack is located on the side of the control pod. Use it to connect any stereo headphones with a 3.5mm plug.

Note: When headphones are connected, the speaker system is muted.


SYSTEM SPECIFICATIONS*

Altec Lansing's superior sound comes from our patented Dynamic EQ technology, which utilizes custom-built, high-fidelity drivers, state-of-the-art equalization circuitry, and a harmonious mix of the following specifications:

Sound Pressure Level (SPL):	92 dB	System Response:	32 Hz – 20 kHz (-10 dB)
Total Continuous Power:	46 Watts RMS	Signal to Noise Ratio	
• Front Speakers:	11 Watts/channel @ 4 ohms @ 10% THD @ 180 Hz – 20 kHz 2 Channels Loaded	@ 1 kHz input:	> 85 dB
• Subwoofer:	24 Watts @ 8 ohms @ 10% THD @ 32 Hz – 180 Hz Single Channel Loaded	Drivers (per satellite):	One 40mm mid-range driver and one 18mm high-end tweeter
		Subwoofer:	Two 5.25" long-throw woofers in isobaric configuration

*Power rating conforms to FTC Amplifier Rule #16 C.F.R. Part 432.

TROUBLESHOOTING

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
No LEDs are lit.	Power isn't turned on.	Turn on the speaker system by pressing the  button on the control pod or wireless remote. An LED will light on the control pod when the power is ON.
	AC power cord isn't connected to the wall outlet.	After all other connections are made, plug the AC power cord (on the back of subwoofer) into a wall outlet.
	Surge protector (if used) isn't powered on.	If the AC power cord is plugged into a surge protector, make sure the surge protector is switched on.
	Wall outlet not functioning.	Plug another device into the wall outlet (same jack) to verify the wall outlet is working.

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
No sound from one or more speakers.	Power isn't turned on.	After all other connections are made, plug the AC power cord (on the back of subwoofer) into a wall outlet.
		Turn on the speaker system by pressing the stand-by button  on the control pod or wireless remote. An LED will light on the control pod when the power is ON.
	Volume is set too low.	The rotary dial on the control pod controls the master volume. Rotate the dial to the right to increase the volume.
		Check volume level on the computer sound card or alternate audio source device, and set at mid-level.
	The color-coded 3.5mm stereo cables are not properly connected to the audio source.	Check the plug connections on the audio source. Make sure the signal cables are inserted firmly into the correct jacks.
	Problem with audio source device.	Test the speakers on another audio device. Remove the 3.5mm stereo cable from the audio source device and connect it to "line-out," "audio-out," or the headphone jack of another audio source.
Crackling sound from speakers.	Bad connection.	Check all cables. Make sure they are connected to "line-out" or "audio-out" jack on your sound card or other audio source — NOT "speaker-out."
	Volume level in computer operating system is set too high.	Check the computer operating system volume level and decrease it if necessary.
	A problem with your audio source device.	Unplug the stereo cable from the audio source. Then plug it into the headphone jack of an alternate audio source (e.g., Walkman, Discman or FM radio).
Sound is distorted.	Volume level set too high.	The rotary dial on the control pod controls the master volume. Rotate the dial to the left to decrease the volume.
	Computer operating system volume level is set too high.	Adjust the computer operating system volume and balance levels to the center as a starting point, then adjust the level on the speaker using the volume control.
	Sound source is distorted.	WAV files are often of poor quality. So distortion and noise are easily noticed with high-powered speakers. Try a different sound source such as a music CD.
Radio interference.	Too close to a radio tower.	Move your speakers until the interference goes away.
No sound from subwoofer.	Bad connection.	Check to make sure that all cables are connected properly and are making a clear connection.
	Sound source has little low-frequency content.	Many .WAV and .MID files often have little low-frequency content and sound flat when you listen to them on a computer. Try a song with more bass—something from your CD collection.
Low hum from subwoofer.	The AC in your house is at 60 cycles per second, which is within the audio frequency of the subwoofer.	Some low hum may be detected when your speaker system is powered on without an audio source playing, or when the volume is set at an extremely low level.
Loud hum from subwoofer.	Bad connection.	Unplug the AC power cord from the surge protector (if used), and plug directly into an AC wall outlet.
		Move your cables. Check to ensure they are making a clear connection.
	Bass level set too high.	To control the bass, press the "Bass" button on the control pod and rotate the dial to the left to decrease it.
	Volume or bass level on your audio source device is set too high.	Disconnect your 3.5mm stereo cable from the audio source. If the loud hum goes away, lower the volume on the audio source.
		Lower the volume or bass level on your computer, portable device, etc.
Distorted monitor.	Subwoofer too close to monitor.	Because the subwoofer is not magnetically shielded, it can cause distortion if it's too close to your monitor. Move the subwoofer so it's at least 2 feet from your monitor.



This Class B digital apparatus complies with Canadian ICES-003. • Cet appareillage digital de Classe B est conforme au ICES-003 canadien.
CORPORATE HEADQUARTERS 535 Rte. 6 & 209, Milford, PA 18337-0277, USA • 866-570-5702 • 570-296-4434 • Fax 570-296-6887
EUROPE 13 Rue Beaumont, L-1219 Luxembourg, Luxembourg
ASIA/PACIFIC 25 Canton Road, Tsim Sha Tsui, Kowloon, Hong Kong
Engineered in USA. Made in China

A11389 R01


 ALTEC LANSING®

**Free* Wall
Mounting Kit**

**Kit de montage
mural *gratuit*!**

**¡Gratis* Equipo para
adosar a la pared!**

www.alteclansing.com/fxwallmountingkit

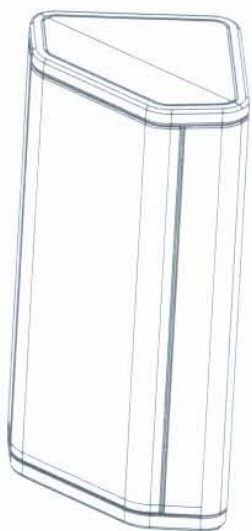

***You only
pay \$3⁰⁰
for shipping
and handling.**

***Vous payez
seulement 3
dollars pour
l'expédition et
le traitement.**


***Solo paga
\$3⁰⁰ por
envío y
manipuleo.**

Where space is an issue, the FX4021 and FX5051 speakers can easily be mounted on the wall. Order your free wall-mounting kit by visiting us online or calling technical support at: **1-800-258-3288** (US only).

Lorsque le manque d'espace est un problème, les enceintes FX4021 et FX5051 peuvent être facilement fixées au mur. Commandez votre kit de montage mural gratuit en visitant notre site Web ou en appelant le support technique au : **1-800-258-3288** (États-Unis uniquement)

Donde el espacio sea un problema, los parlantes del FX4021 y FX5051 pueden adosarse fácilmente a la pared. Pida su equipo gratis para adosar a la pared visitándonos en línea o llamando a soporte técnico al: **1-800-258-3288** (EE.UU. solamente)

**Mounting
Bracket**

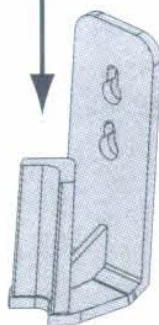

www.alteclansing.com/fxwallmountingkit

©2006 Altec Lansing Technologies, Inc. All rights reserved.

A11823 R01

Please send products and other
correspondence to:

Attn: Product Marketing
Altec Lansing Technologies, Inc.
Routes 6 and 209
Milford, PA 18337 USA



First-Class
Postage
Required
Post Office will
not deliver
without proper
postage.

X M A 0 1 - 0 1


ALTEC LANSING®
PO BOX 174394
DENVER CO 80217-4394




ALTEC LANSING®

Altec Lansing - Extra Year of Warranty

"Give Us 2 Minutes, We'll Give You 2 Years!"

All you have to do is fill out this registration card and send it back to us within 30 days.
In exchange for the valuable feedback you provide, you get an additional year of
coverage.

Registration card must be completed and mailed to Altec Lansing within 30 days of your
purchase from an authorized Altec Lansing dealer in order to qualify for our extended 2
year limited warranty. Valid in USA only.

(Not returning this card will not void the original 1-year limited warranty.)

21. To help us understand our customers' lifestyles, please indicate the interests and activities in which *you or your spouse* enjoy participating on a *regular* basis.

- | | | |
|--|---|---|
| 01. <input type="checkbox"/> Bicycling | 18. <input type="checkbox"/> Automotive Work | 35. <input type="checkbox"/> Wines |
| 02. <input type="checkbox"/> Golf | 19. <input type="checkbox"/> Home Workshop/Do-It-Yourself | 36. <input type="checkbox"/> Stamp/Coin Collecting |
| 03. <input type="checkbox"/> Physical Fitness/Exercise | 20. <input type="checkbox"/> Shop by Catalog/Mail | 37. <input type="checkbox"/> Collectibles |
| 04. <input type="checkbox"/> Running/Jogging | 21. <input type="checkbox"/> Shop via the Internet | 38. <input type="checkbox"/> Real Estate Investments |
| 05. <input type="checkbox"/> Snow Skiing | 22. <input type="checkbox"/> Listen to Records/Tapes/CDs | 39. <input type="checkbox"/> Stocks/Bond Investments |
| 06. <input type="checkbox"/> Tennis | 23. <input type="checkbox"/> Avid Book Reading | 40. <input type="checkbox"/> Contests/Sweepstakes |
| 07. <input type="checkbox"/> Camping/Hiking | 24. <input type="checkbox"/> Bible/Devotional Reading | 41. <input type="checkbox"/> Casino Gambling |
| 08. <input type="checkbox"/> Fishing | 25. <input type="checkbox"/> Health/Natural Foods | 42. <input type="checkbox"/> Dieting/Weight Control |
| 09. <input type="checkbox"/> Hunting/Shooting | 26. <input type="checkbox"/> Photography | 43. <input type="checkbox"/> Self-Improvement |
| 10. <input type="checkbox"/> Grandchildren | 27. <input type="checkbox"/> Cultural/Arts Events | 44. <input type="checkbox"/> Walking for Health |
| 11. <input type="checkbox"/> Donate to Charitable Causes | 28. <input type="checkbox"/> Fashion Clothing | 45. <input type="checkbox"/> Have a Dog |
| 12. <input type="checkbox"/> Needlework/Knitting | 29. <input type="checkbox"/> Art/Antique Collecting | 46. <input type="checkbox"/> Have a Cat |
| 13. <input type="checkbox"/> Sewing | 30. <input type="checkbox"/> Member of Frequent Flyer Program | 47. <input type="checkbox"/> Subscribe to an Internet Service |
| 14. <input type="checkbox"/> Flower Gardening | 31. <input type="checkbox"/> Foreign Travel | 48. <input type="checkbox"/> Watching Sports on TV |
| 15. <input type="checkbox"/> Vegetable Gardening | 32. <input type="checkbox"/> Cruise Ship Vacations | 49. <input type="checkbox"/> Home Video Recording |
| 16. <input type="checkbox"/> Crafts | 33. <input type="checkbox"/> Travel in USA | 50. <input type="checkbox"/> Moneymaking Opportunities |
| 17. <input type="checkbox"/> Speak Spanish | 34. <input type="checkbox"/> Gourmet Cooking/Fine Foods | 51. <input type="checkbox"/> Pay Bills Online |

22. Using the numbers in the above list, please indicate your 3 most important activities:

Thanks for taking the time to fill out this questionnaire. Your answers will be used for market research studies and reports. They will also allow you to receive important mailings and special offers from a number of fine companies whose products and services relate directly to the specific interests, hobbies, and other information indicated above. Through this selective program, you will be able to obtain more information about activities in which you are involved and less about those in which you are not. Please check here if, for some reason, you would prefer *not* to participate in this opportunity. ☐

Failure to return this card will not diminish your warranty rights.

Copyright © 2005 All Rights Reserved

Please seal with tape. Do not staple.